







Assemble Introduction

(The size will be according to regular measurements)

1 	2 	3 
Insert the castors into the base.	Insert the gas lift into the center hole of the base.	Connect the footrest and Seatcushion*-Chassis assembly with3 pcs M6*16 footrest screws.
4 	5 	6 
Insert the backrest into the rear panel of the mechanism.	Connect the backrest to chassis tailgate with 3 pcs M8*16 screws.	Attach the armrests to the armrest brackets with 4 pcs M6*25 screws and spring washers.
7 	8 	
Align the mechanism hole and insert the gas lift.	Insert the headrest into the backrest, fix it with 2 pcs M6*16 screws, and attach the headrest decorative cover. Assembly is complete.	

Functions

(The size will be according to regular practice)

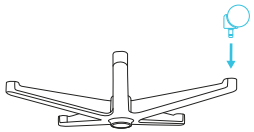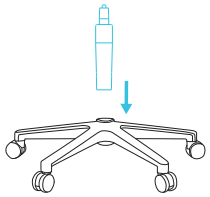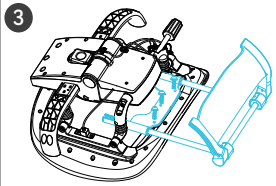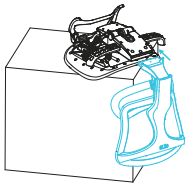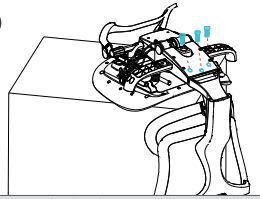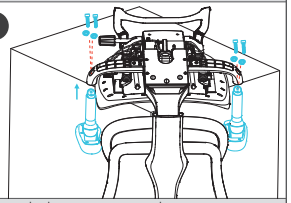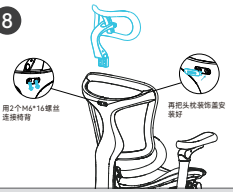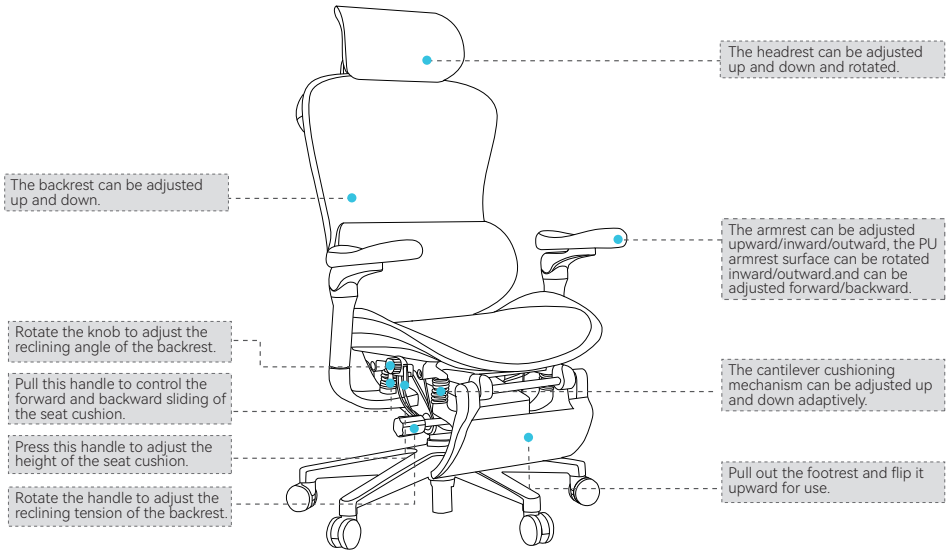

Installation Instruction








1. Before installation, please read all the safety instructions below (drawings) carefully and master the installation steps and methods.
2. Counting the parts is complete or not, if there is any breakage.
3. To avoid injury, it is recommended that you wear gloves during installation.
4. Please choose a spacious and clean flat floor for installation, and then lay the paper sleeves on the ground, to avoid collision between components and the ground.
5. To avoid using the wrong screws, please fix all the screws before tightening them.
6. Please note that once the gas lift is installed, it is difficult to remove.

If you need to disassemble the chair, such as moving, please gently tap the head of the gas lift with a rubber-tipped hammer several times, and then remove the base. After that, continue to gently tap the base, using the principle of vibration to make the gas lift fall off. Please be careful not to get hurt as tools are needed to do this.

(Damage and accidents caused by this operation do not fall within the scope of product warranty, please careful operation.)

Parts List

(The size will be according to regular measurements; One more as a backup)

通用配件				
	Castors: 5 pcs	Chair base: 1 pc	Gas lift: 1 pc	Seat back: 1 pc
				
	Headrest: 1 pc	Seat cushion * mechanism assembly: 1 pc	Armrest: 1 pair	Hex wrench: 1 pc
				
	Headrest decorative cover: 1 pc	Footrest: 1 pc	Headrest & footrest screws (M6x16): 6 + 1 pcs	M6 spring spacer: 4+1 pcs
				
	Armrest screws (M6x25): 4 + 1 pcs	Backrest fixing screws (M8x16): 3 + 1 pcs		
				

Note:Before installation, pls classify the screw, measure the screw length to easy assemble.